 
 
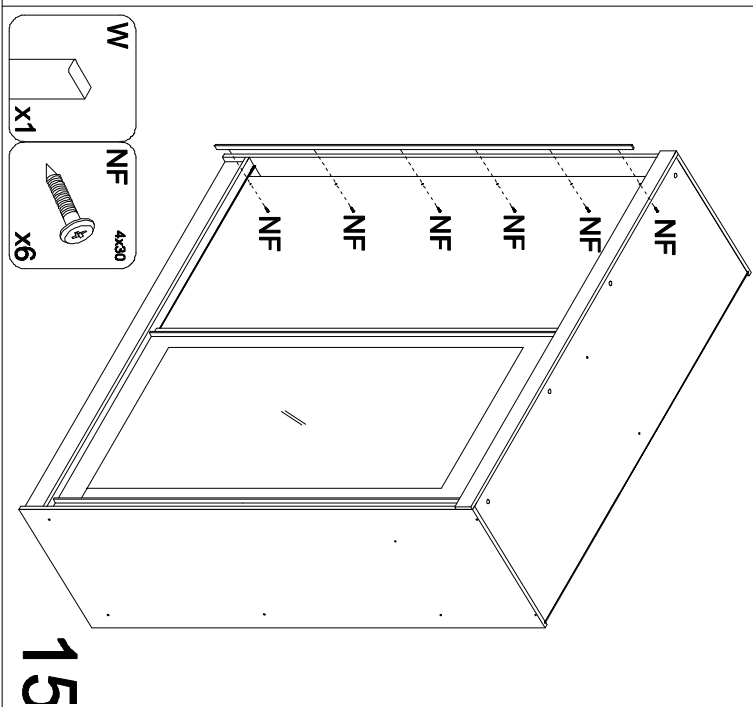 
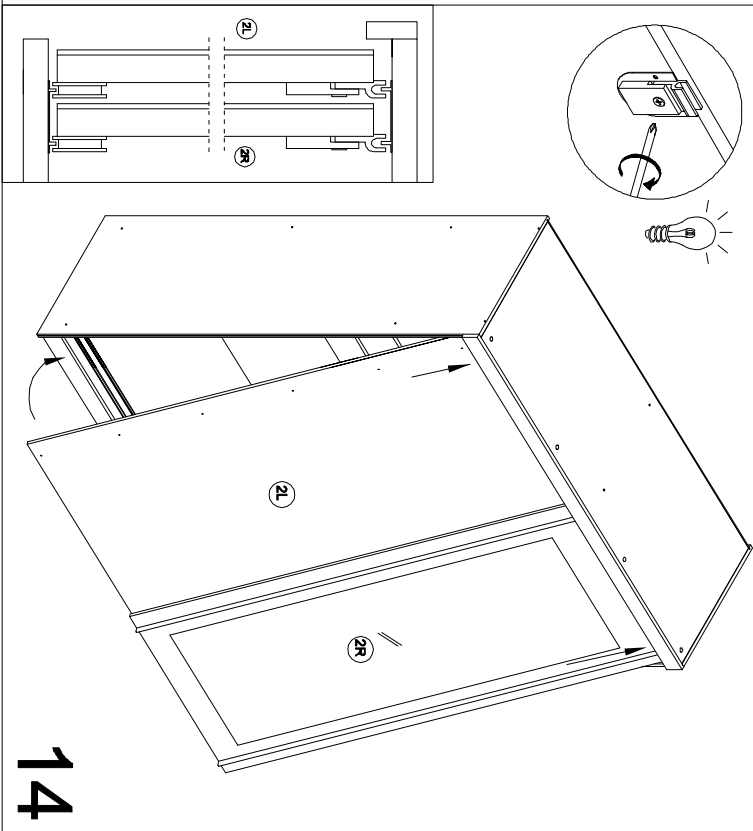 
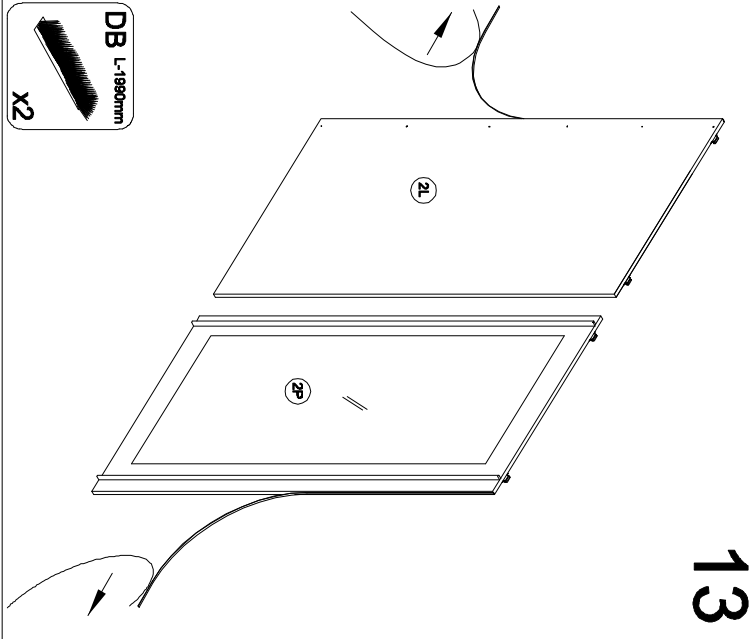 
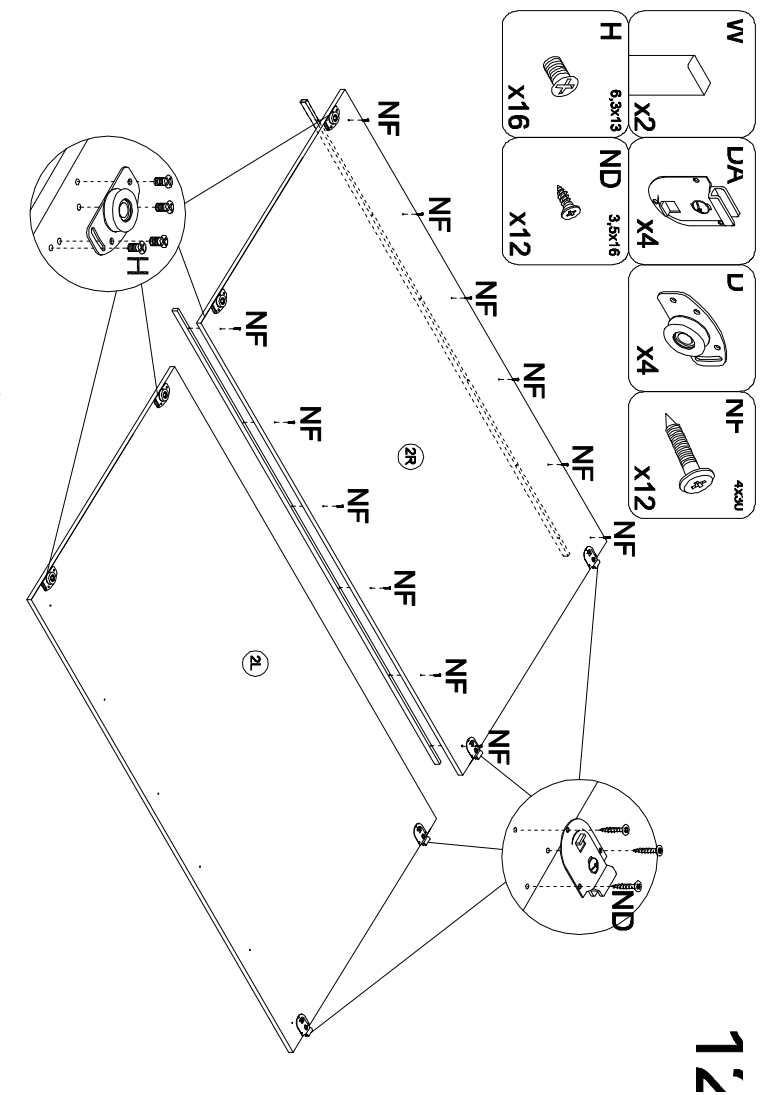 
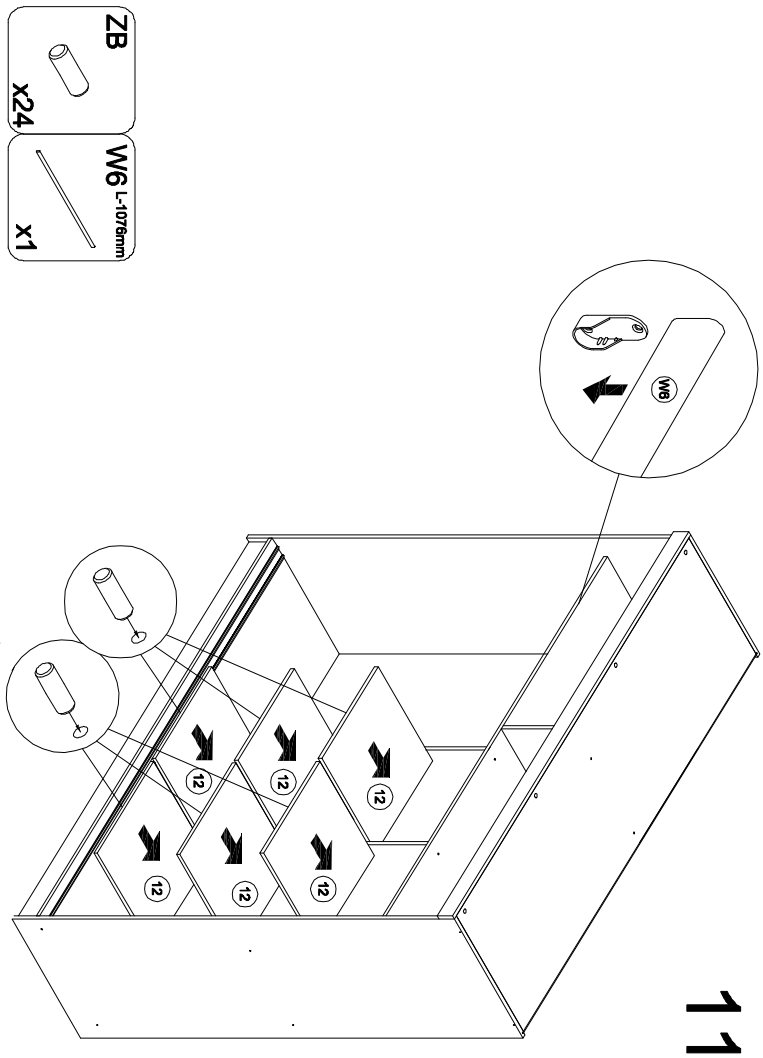 



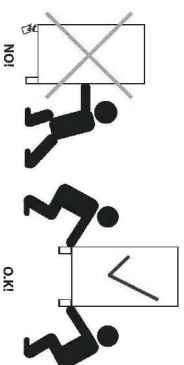


ALASKA 200

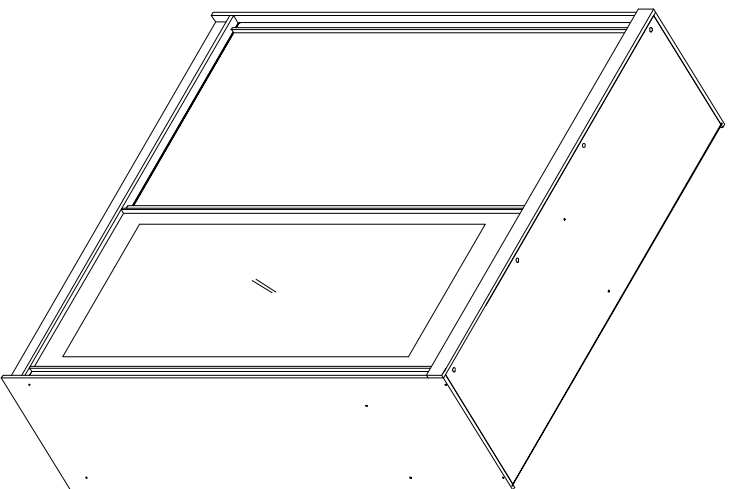


21.04.2015

  
- (D) Montageanleitung
 (FR) Notice de montage
 (NL) Handleiding voor de montage
 (CZ) Montážní návod
 (HU) Szerelési útmutató
 (TR) Montaj talimatı
- (GB) Assembly Instructions
 (IT) Istruzioni di montaggio
 (PL) Instrukcja montażu
 (SK) Návod na montáž
 (RO) Instrucțiuni de montaj
 (RU) Инструкции по монтажу

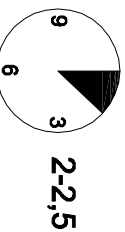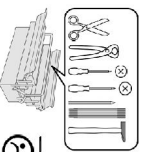





1

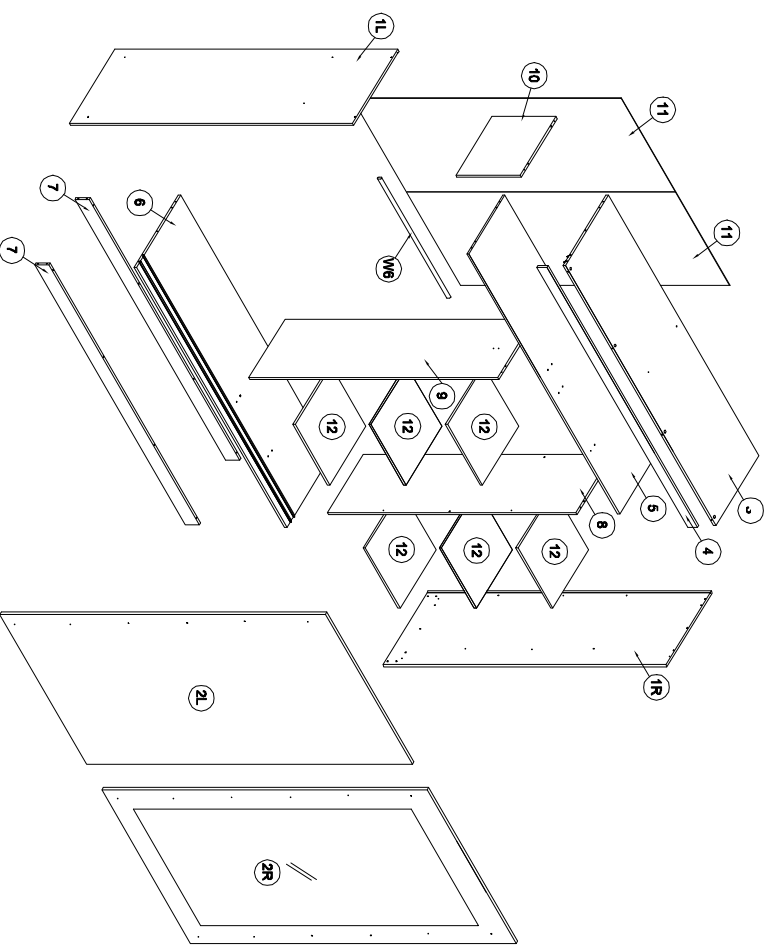 


W6 L-1076mm x1	ZB x24	X x10	H 6.3x13 x16	W x3	DA x4	D x4	DB L-1890mm x2
A 6x32 x44	T x2	ND 3.5x16 x16	ZC x3	NF 4x30 x18	N 3x20 x70	YD 7x50 x24	WB x1
B x4	S L-1857mm x1	C x4	S x1	C x4	Z x4	ZG x20	

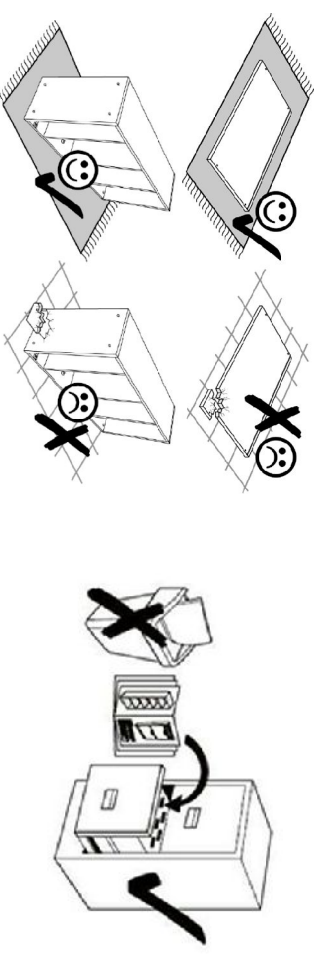 

2

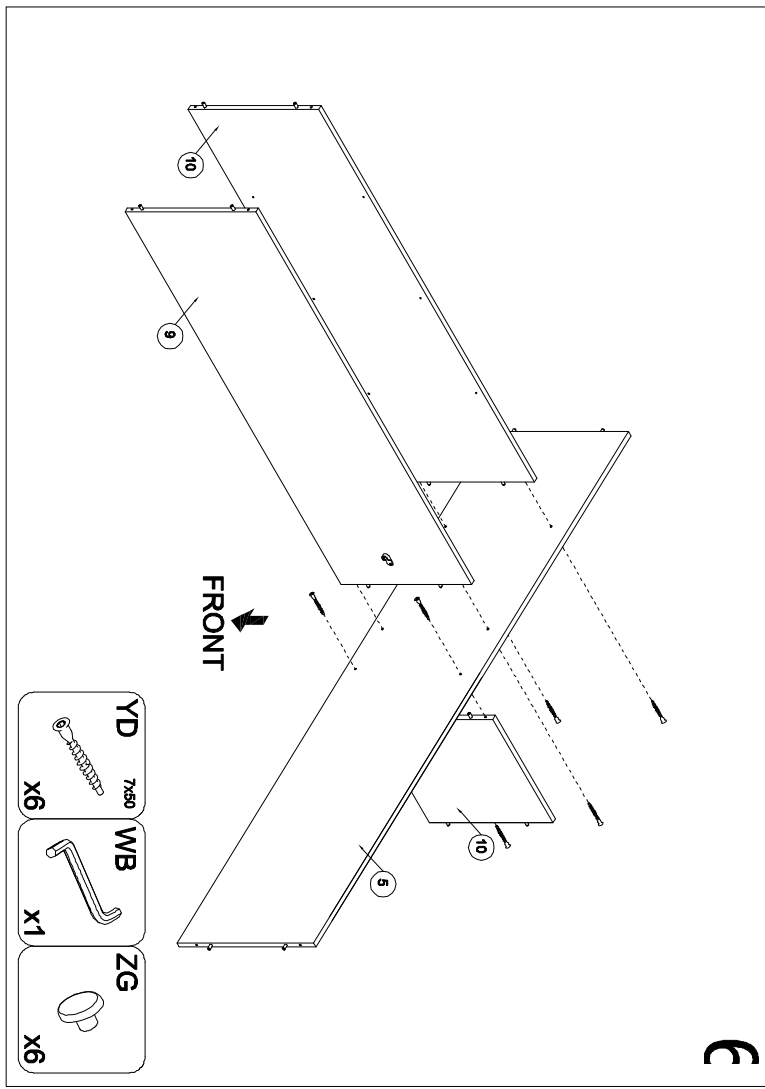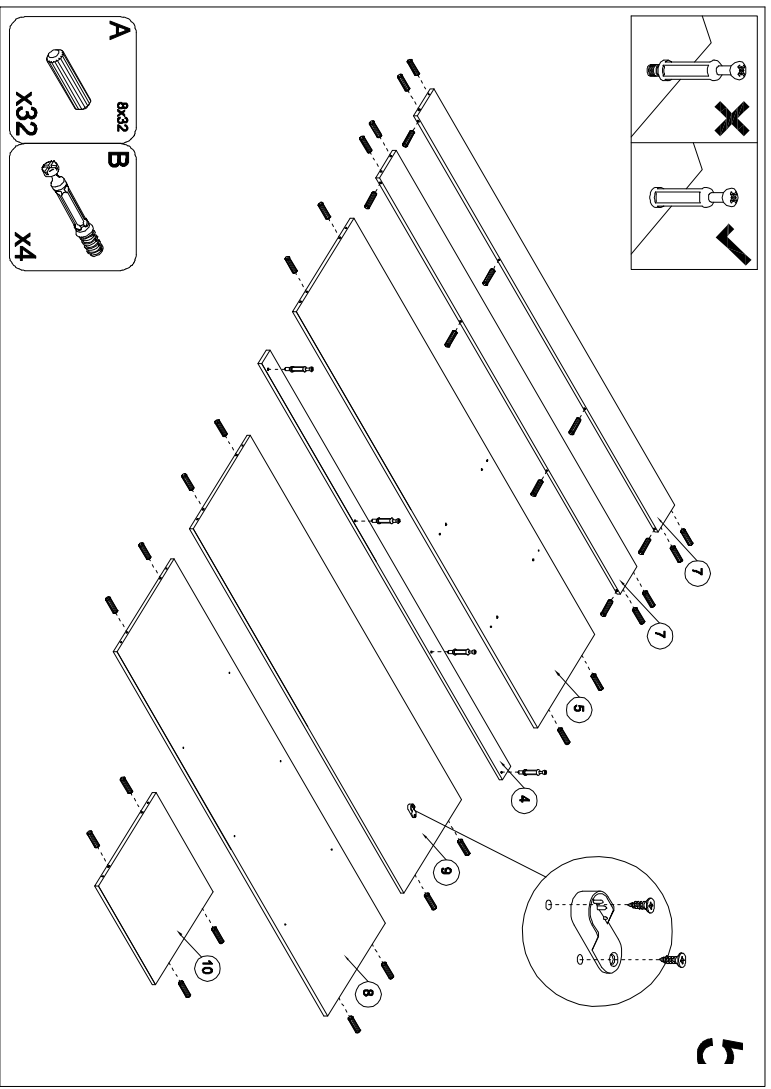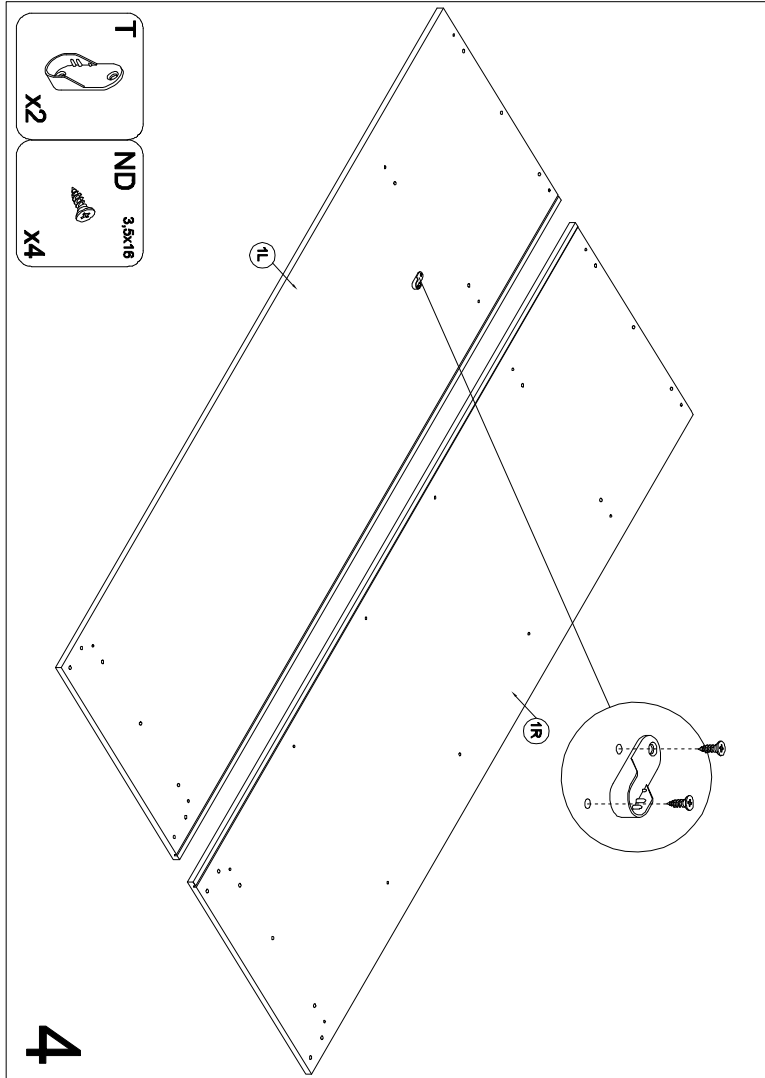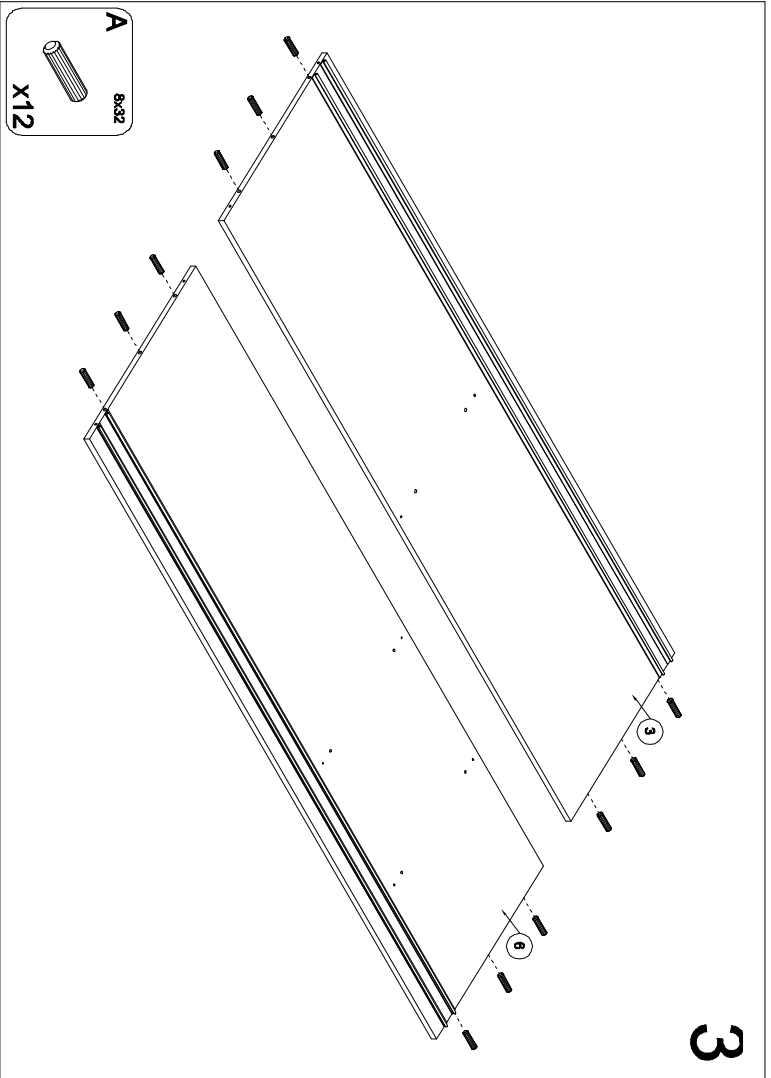    


- YL 1x20
- WB x1
- ZG x6

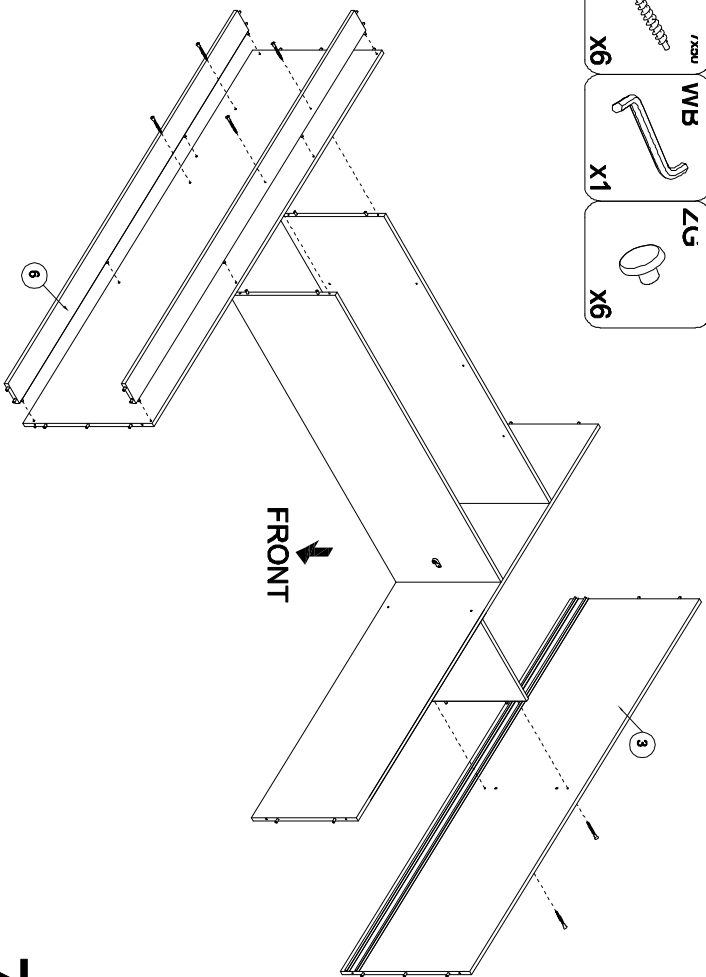 


7

 - ZG x12
- YD 7x60 x12
- WB x1

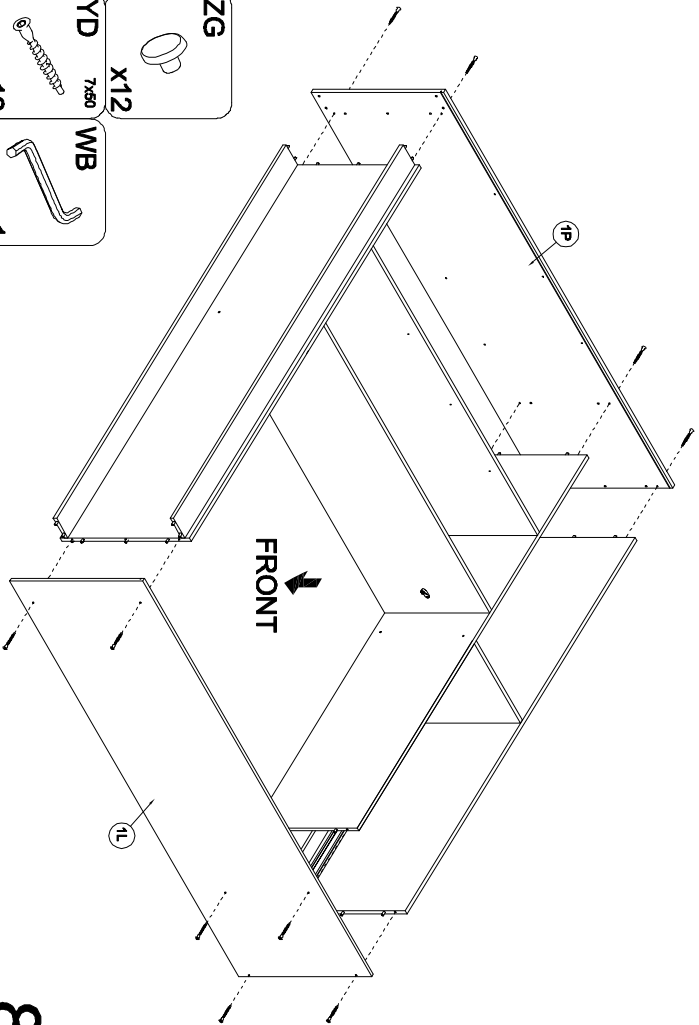


8

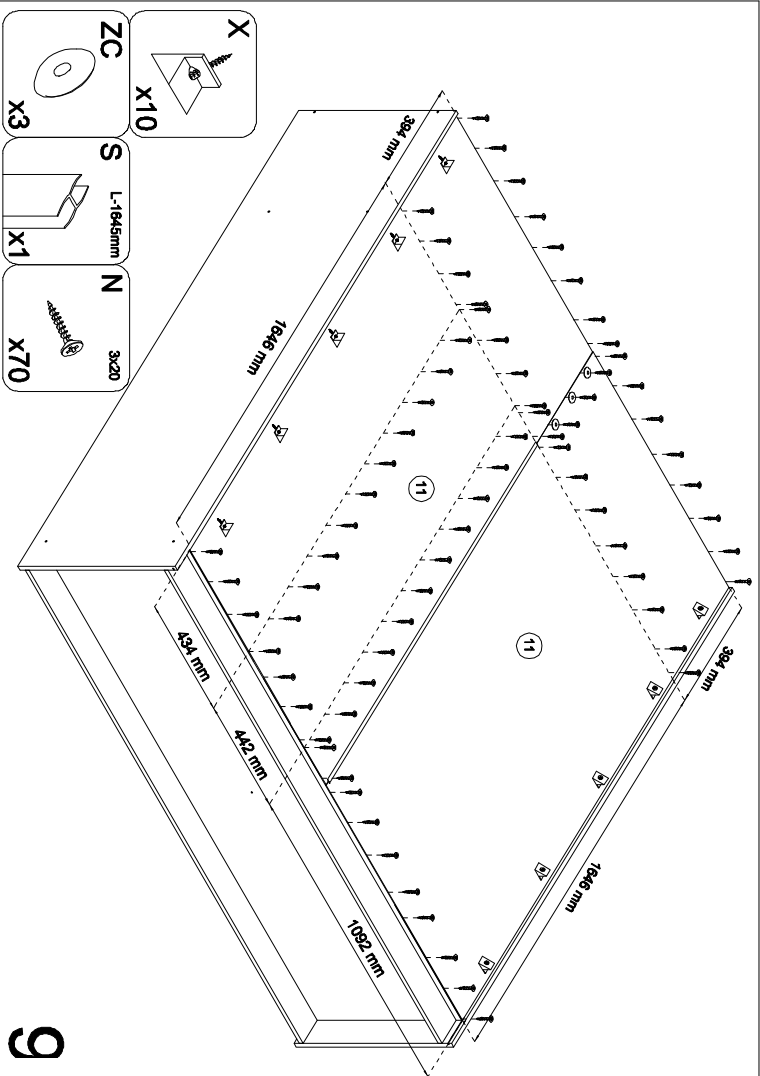 

9

 - 1
- 2
- C x4
- Z x4

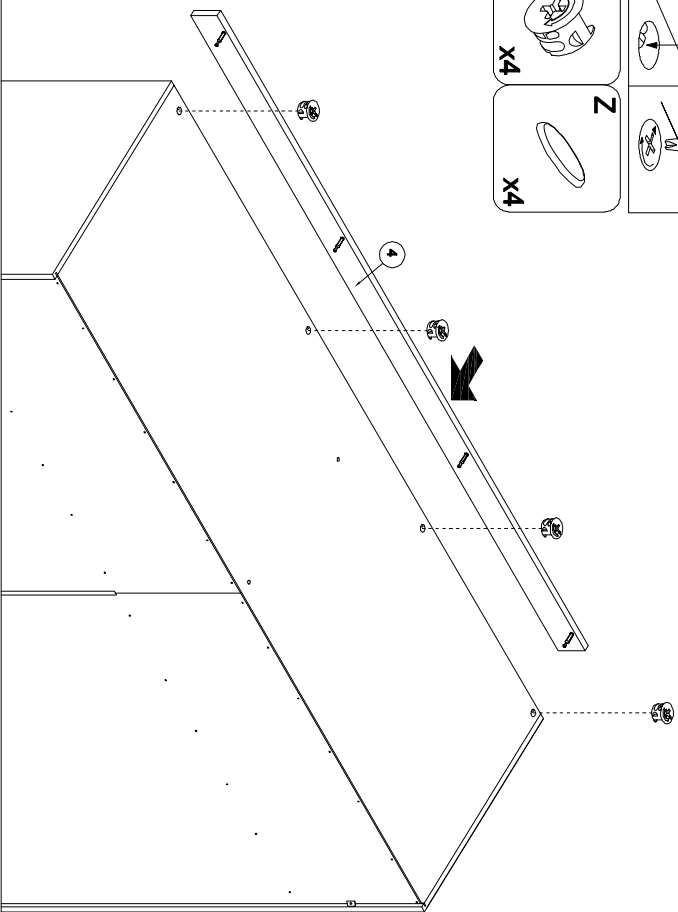

10