


Model: Mondi Bed W900

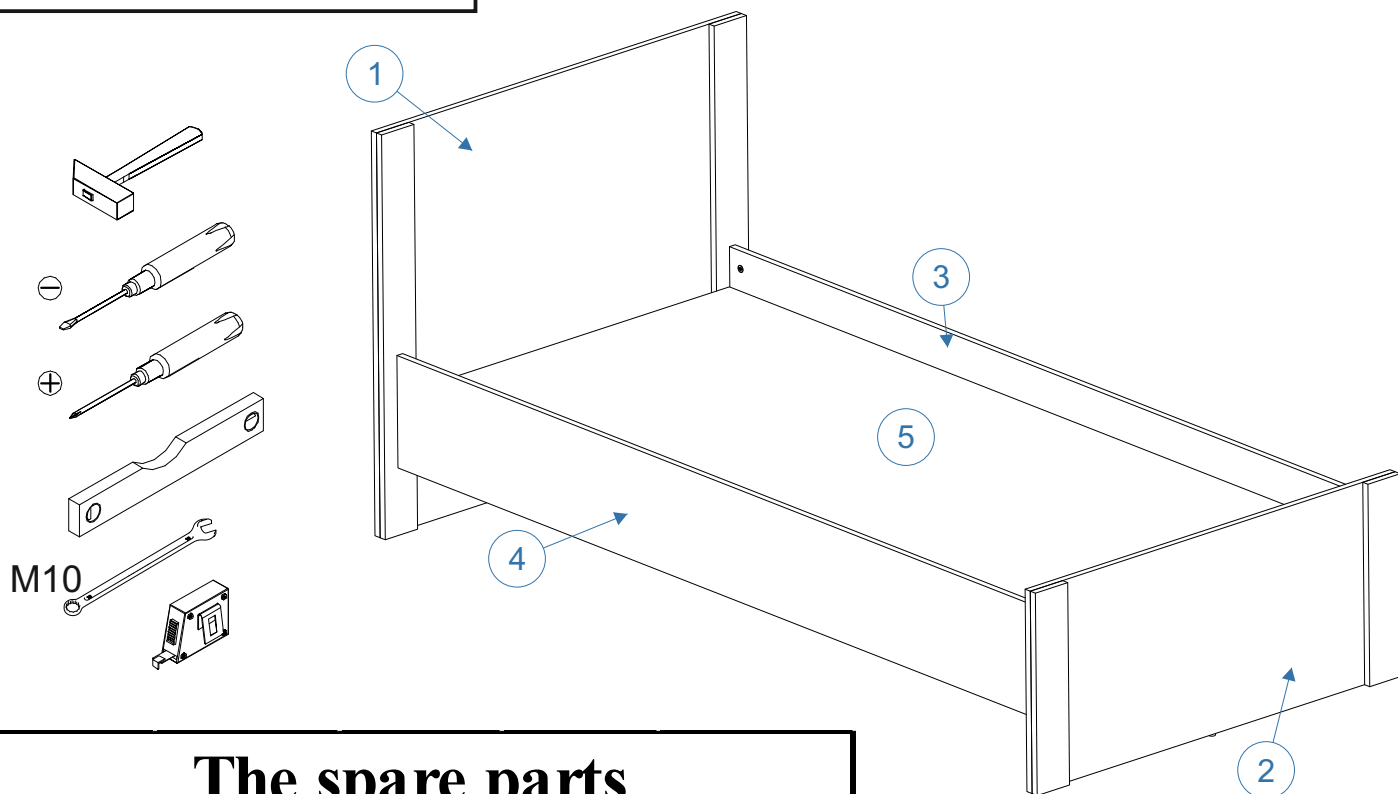




The spare parts

Part number	Lenght	Widht	Q-ty	Detailed number
1/2	1016	900	1	1
	1016	450	1	2
	910	300	2	6
	Spare parts			
2/2	2000	250	1	3
	2000	250	1	4
	910	300	1	6
	1974	890	1	5

GENERAL VIEW OF THE SPARE PARTS





A - 8	B - 4	C - 4	C2 - 4	D - 4	LN - 12	I - 1
M6 L70		M6 L25	M6 L12	M6		3,5x16
F - 4	JB - 4	Bt - 4	V - 12	P - 4	J - 12	S1 - 48

Model: Mondi Bed W900

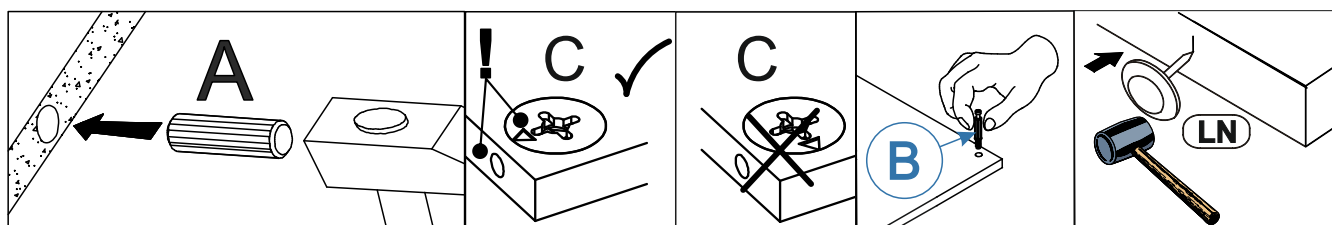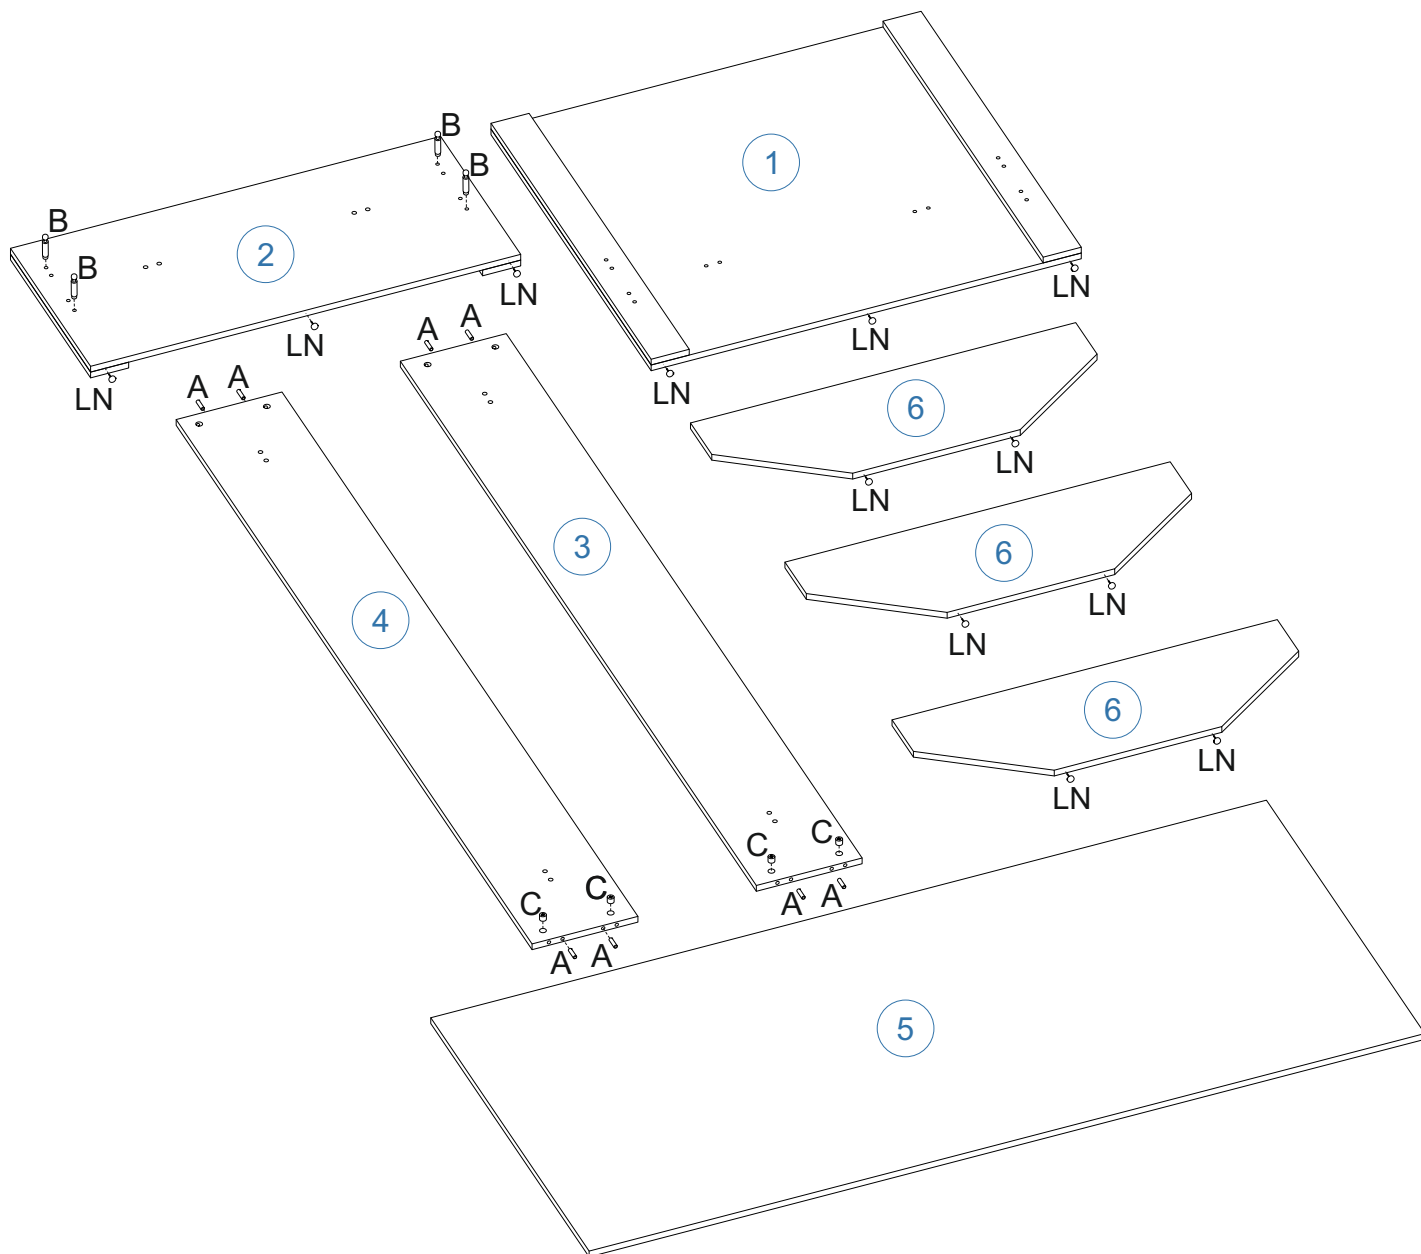



Model: Mondi Bed W900



2

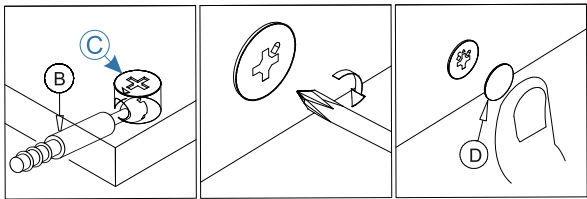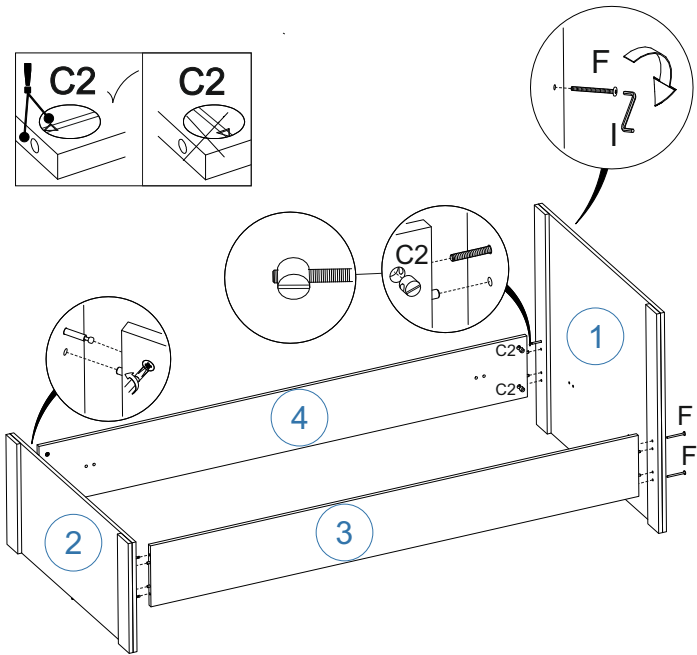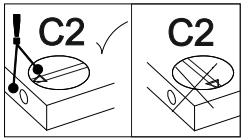

4

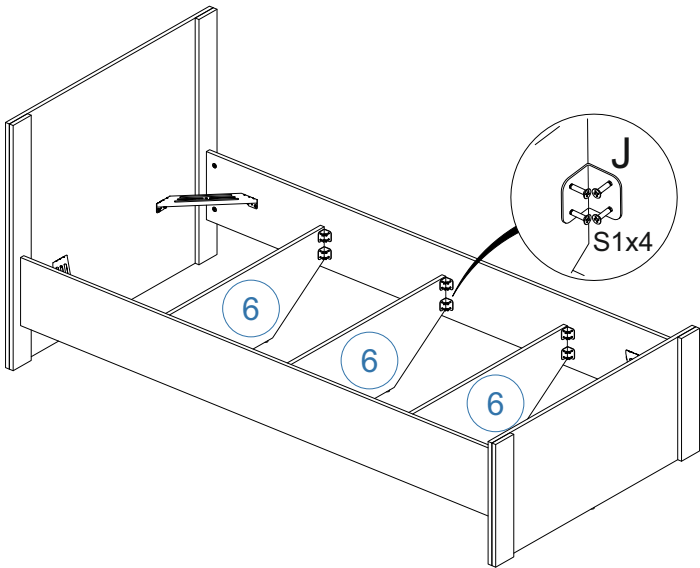

3

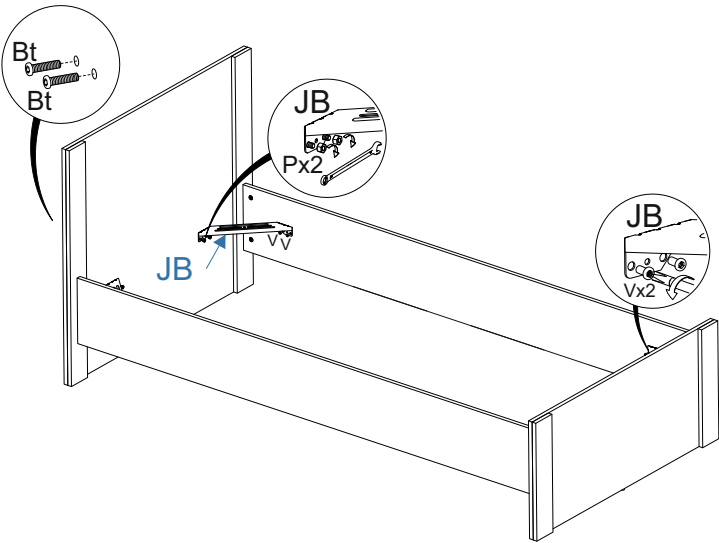

5

